




YAMAHA

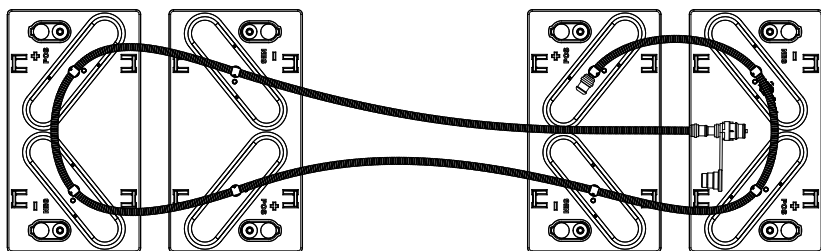

Yamaha "The Drive" 12-Volt Batteries - (2006 or newer)

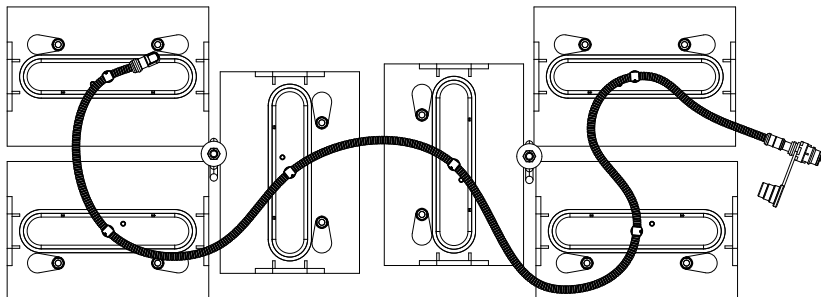

Yamaha 8-Volt Batteries

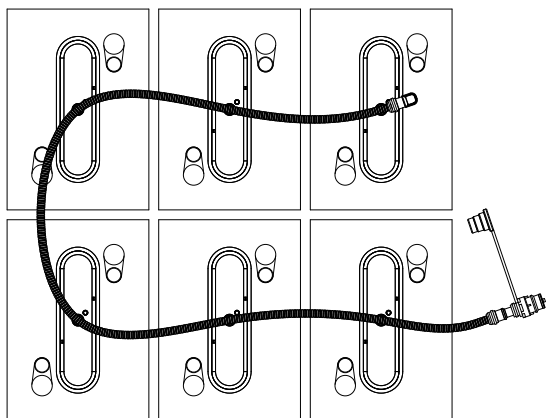

Yamaha 6-Volt Batteries

Installing a HydroLink™ Watering System on your Trojan Batteries

IMPORTANT: For detailed installation instructions review Trojan's HydroLink™ Watering System with the Snake™ Tubing Manual included with your kit. Make sure to follow instructions on Page 4 of the manual before installing.

STEP 1

Remove Current Vent Caps and Insert HydroLink™ Vents.



STEP 2

Firmly Press HydroLink™ Vents Down. Ensure HydroLink™ vents are completely seated to avoid electrolyte spillage.

WARNING! Press in the HydroLink™ vent with your hands only - do not use a hammer.




STEP 3

Install Snake™ Tubing


Review the proper diagrams for correct Snake™ tube routing based on the application and manufacturer's vehicle. Once reviewed, remove the red center plastic plug from the HydroLink™ vent.



Then snap each Snake™ plug into each HydroLink™ vent. Press firmly until you hear a click.

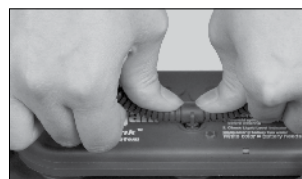

If you don't hear a click, it has not been installed correctly.

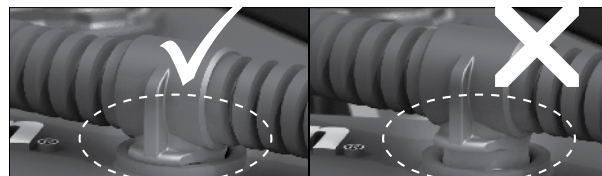


Correctly Installed

Incorrectly Installed

Your HydroLink™ Watering System is now ready for use.

E-Z-GO

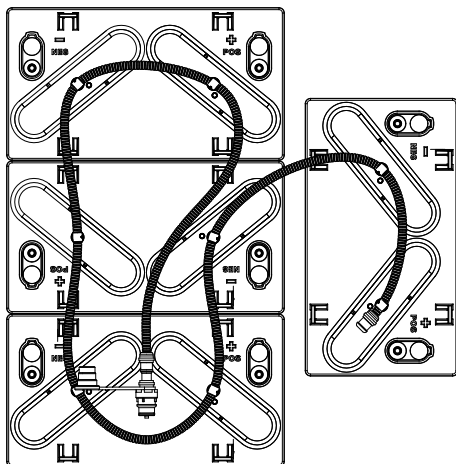

E-Z-GO "RXV" 12-Volt Batteries

Installing a HydroLink™ Watering System on your Trojan Batteries

IMPORTANT: For detailed installation instructions review Trojan's HydroLink™ Watering System with the Snake™ Tubing Manual included with your kit. Make sure to follow instructions on Page 4 of the manual before installing.

STEP 1

Remove Current Vent Caps and Insert HydroLink™ Vents.



STEP 2

Firmly Press HydroLink™ Vents Down.

Ensure HydroLink™ vents are completely seated to avoid electrolyte spillage.

WARNING! Press in the HydroLink™ vent with your hands only - do not use a hammer.




STEP 3

Install Snake™ Tubing


Review the proper diagrams for correct Snake™ tube routing based on the application and manufacturer vehicle. Once reviewed, remove the red center plastic plug from the HydroLink™ vent.



Then snap each Snake™ plug into each HydroLink™ vent. Press firmly until you hear a click.

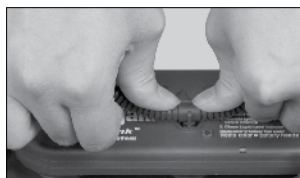


If you don't hear a click, it has not been installed correctly.

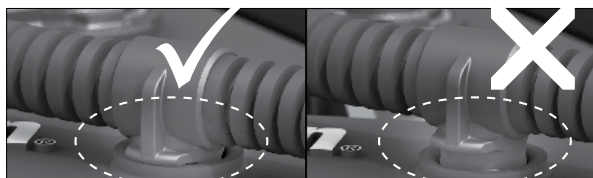

Correctly Installed

Incorrectly Installed


Your HydroLink™ Watering System is now ready for use.

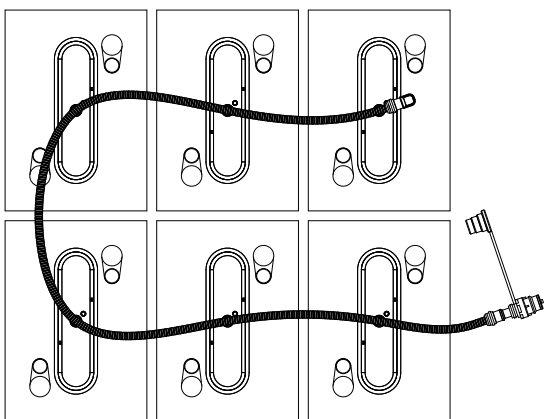


E-Z-GO "TXT" 6-Volt / 8-Volt Batteries

* Terminal configuration may differ on 8-Volt battery.


CLUB CAR

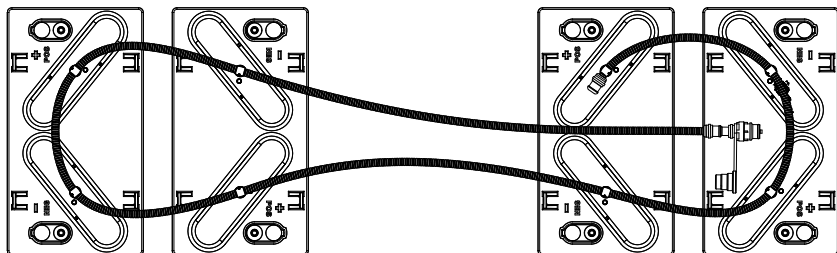

Club Car "Precedent" 12-Volt Batteries - (2008 or newer)

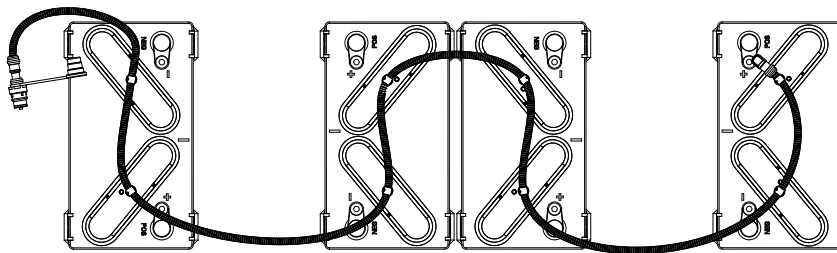

Club Car "DS" 12-Volt Batteries - (2006 or newer)

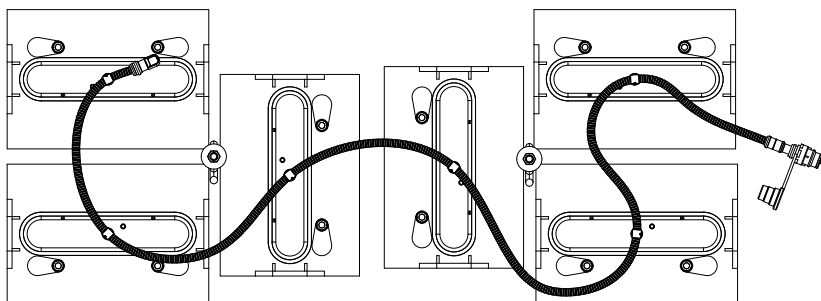

Club Car "Precedent" 8-Volt Batteries - (2008 or newer)

Installing a HydroLink™ Watering System on your Trojan Batteries

IMPORTANT: For detailed installation instructions review Trojan's HydroLink™ Watering System with the Snake™ Tubing Manual included with your kit. Make sure to follow instructions on Page 4 of the manual before installing.

STEP 1

Remove Current Vent Caps and Insert HydroLink™ Vents.



STEP 2

Firmly Press HydroLink™ Vents Down. Ensure HydroLink™ vents are completely seated to avoid electrolyte spillage.

WARNING! Press in the HydroLink™ vent with your hands only - do not use a hammer.




STEP 3

Install Snake™ Tubing


Review the proper diagrams for correct Snake™ tube routing based on the application and manufacturer vehicle. Once reviewed, remove the red center plastic plug off the HydroLink™ vent.



Then snap each Snake™ plug into each HydroLink™ vent. Press firmly until you hear a click.

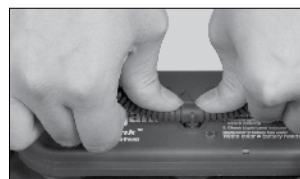

If you don't hear a click, it has not been installed correctly.

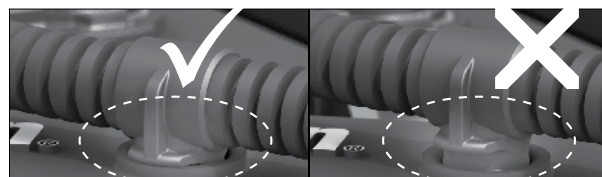

Correctly Installed

Incorrectly Installed

Your HydroLink™ Watering System is now ready for use.